





AUSSIE
GREEN LIGHTING

Unit 10/78 Willandra Drive Epping Vic 3076 | 03 9401 4885 |

E-mail: info@aussiegreenlighting.com.au |

Web: www.aussiegreenlighting.com.au

LED Emergency Tri-proof Batten Light | 16W

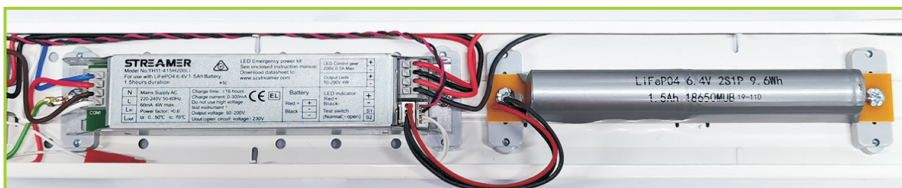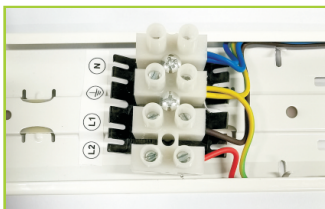

APPLICATION

Indoor and outdoor lighting,with IP65,it can be used at chick en farm,basement,car pariking, warehouses,corridors,outside of building,etc



SPECIFICATIONS


Product Size (mm)	1207X91X78
Power	16W
LCP	15.7W
Emergency Power And Time	4W 120min
Input Voltage	AC220~240V,50Hz
Opal Diffuser Material	PC
Body Mateial	PC
Body Colour	Grey
Clips	stainless steel clips
Efficiency	150lm/w
LED Type	SMD 2835
CCT	3000K,4000K,5000K,6500K
CRI	Ra > 80
Power Factor	> 0.9
Beam Angle	120°
IP Rating	IP65
Warranty	3 years
VEET	Approved
IPART	Approved

LED MANUAL INSTRUCTION


Safety Notice:

- ❶ Installation should be done by registered electricians.
- ❷ Before replacing the driver, please switch off the power supply and wait until it cools down completely.
- ❸ Never touch the working luminaire
- ❹ In any case of malfunction, switch off the power supply immediately, and do not try to repair it yourself.
- ❺ Repairment should only be done by registered electricians or official service agent.

Include




Not Include

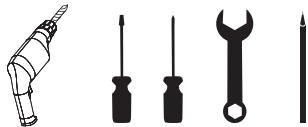

Model	Power	Fixing Hole Centre
ERS-TRI12WE	12W	280mm
ERS-TRI24WE	24W	770mm
ERS-TRI36WE	36W	770mm

x1

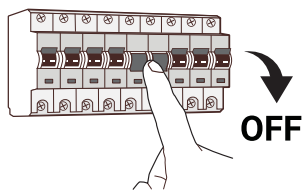


WARNING


Switch off the power supply before installation



1. Drill a $\varnothing 6\text{mm}$ hole




3. Fix the luminaire with the brackets

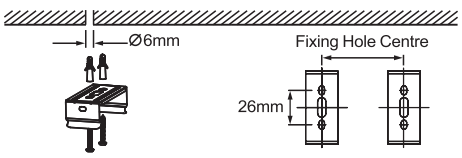


2. According to the Fixing hole centre, instal expansion bolts and screws, instal the bracket.




4. Finish installation

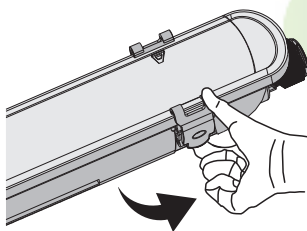


1. Unbuckle the clips

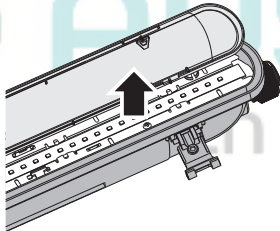


2. Take out of the diffuser

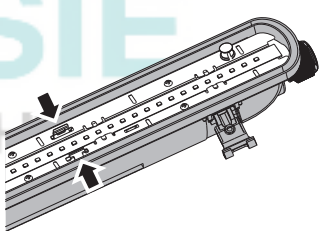


3. Push down the U brackets

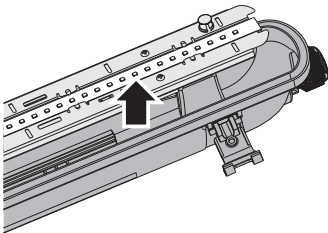


4. Take out of the LED module

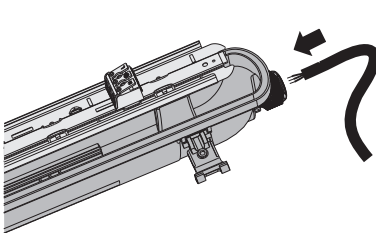


5. Insert the cable through the cable gland

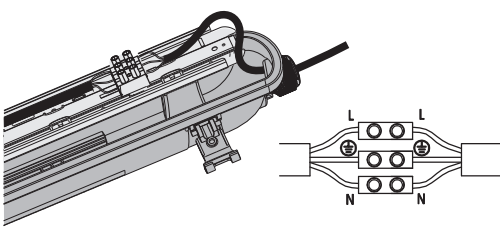


6. Connect the wires, L to L , N to N, $\oplus$ to $\oplus$

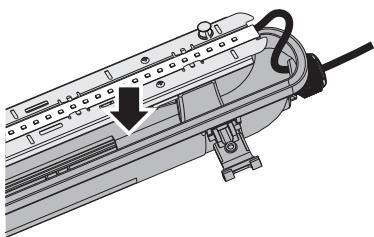

7. Put back the LED module

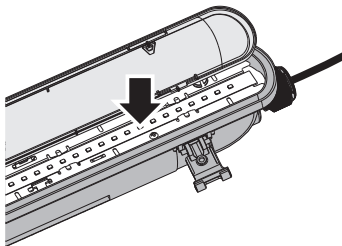

8. Close the luminaire


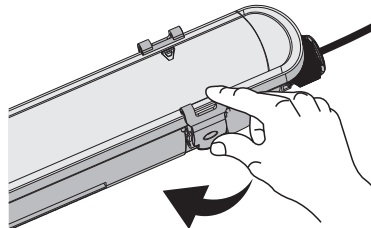


9. Buckle the clips



WARNING

Switch off the power supply
before installation

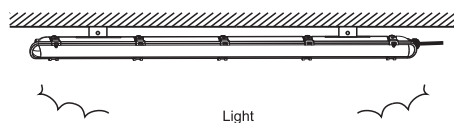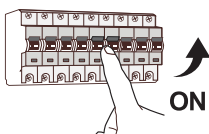

PACKING

N.W.(KG)	G.W.(KG)	CARTON SIZE(mm)	QTN/CTN
15	17	1225X290X260	9

Package size (1200mm item)

